


AVT Yamaha FZ-07 NI Fender Eliminator Install Guide


1) Remove the rear seat with your motorcycle key. Remove the front seat being held by (2) 5mm Hex bolts hidden under the back corners of the seat.



2) #1: Remove the front and rear covers around the back seat both held with (2) Philips screws. Pull the front cover up and the rear cover slides back and up. #2: remove the (2) 6mm Hex bolts securing the fairing from the top (do not lose the spacers that are under these fairing bolts).

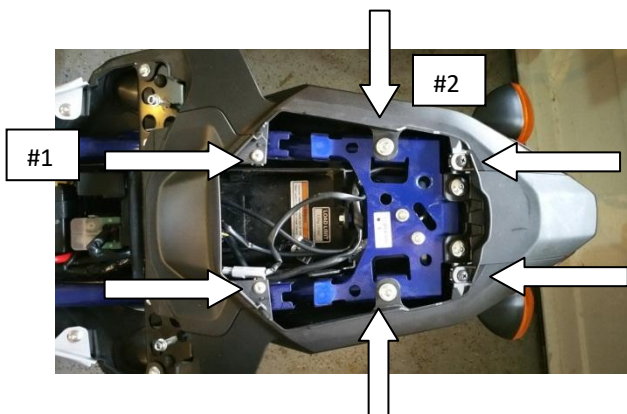

3) Remove the (5) pop rivets that are holding the plastic fairing around the OEM fender on the bottom.

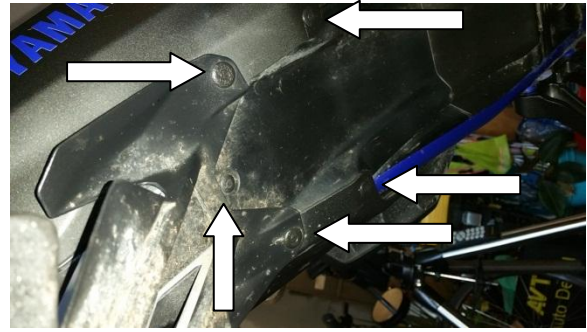


4) Pull the fairings out from around the OEM fender to expose the bolts securing it. A little steady pressure is required to do this as there are some clips holding it in place. Loosen the OEM fender (4) 8mm nuts from the bottom.



5) Trace back the OEM wires from the fender and disconnect them. There are two gray and one black connectors.

Cut the zip tie securing the wires and undo the black clip next to it. Pull the wires out of the bike as you lower the OEM fender out of the way.

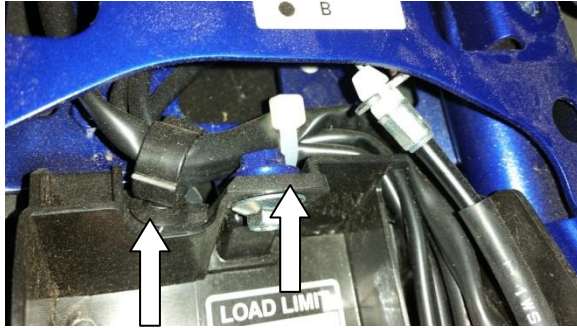

6) Feed the wires from your new fender eliminator through the wire opening from the bottom and attach the fender eliminator bracket with the (4) OEM 8mm bolts.

7) Route the wire bundle from the fender eliminator into the OEM path and connect the electric connectors: Two gray plug to gray plugs respectively, and black plug to black plug.

8) Reinstall the rest of the components is the reverse of the removal:

#1: bottom (5) pop rivets

#2: top two covers and (2) 6mm hex bolts

#3: seats

#4: license plate

Congratulations on successfully installing your New AVT Yamaha FZ-07NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com