



AVT Ninja 650 Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key. Remove the front seat by pulling back and up.


2) Remove the rear right, and left fairings that are secured with 1) #4 hex bolt and 2) (2) 8mm bolts. The fairings slide out towards the rear of the bike and out.

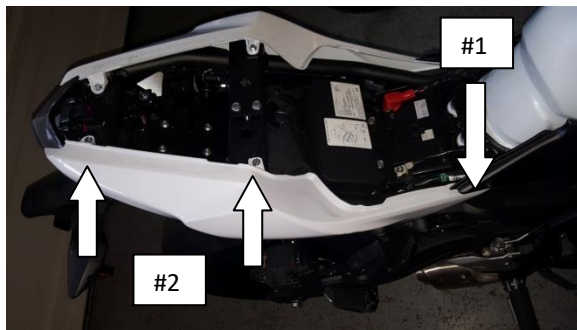


3) 1) Remove the (2) 8mm bolts securing the tail light. 2) Remove the (4) #5 hex bolts holding the fender.

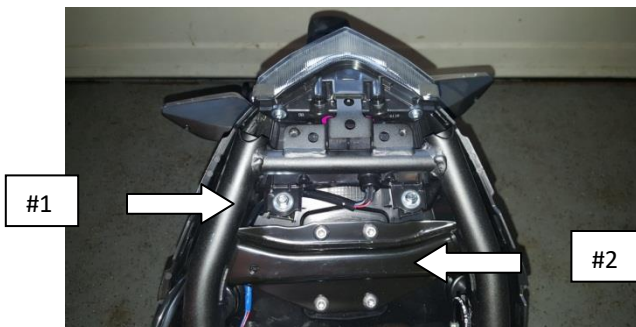


4) Unplug the 3 electrical plugs coming out of the OEM fender on the right side of the bike. Also unplug the tail light plug on the other side of the frame.

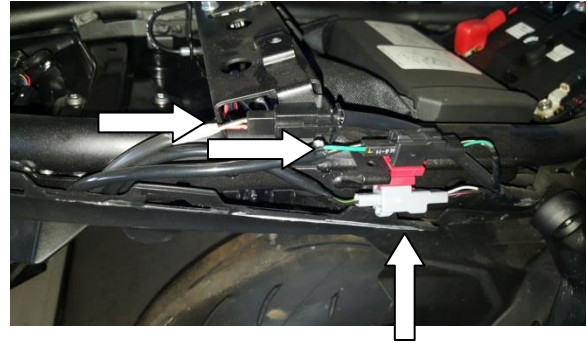


5) Remove the OEM fender & tail light: At this point the entire rear fender section will sag a bit and you will need to remove (1) Philips screw on the inside of the fender to release it. Also release the wires from their OEM location noting how they were routed. Remove the tail light.

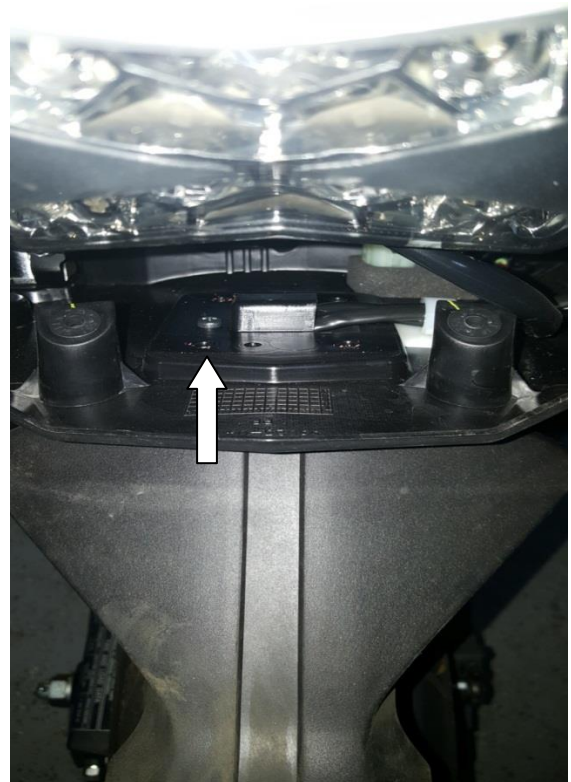

6) Install your new AVT fender eliminator: Feed the wires from your new fender eliminator into the OEM location and attach the fender eliminator bracket with the (2) OEM # 5 hex bolts and nuts provided through the rear set of holes. Feed the bolts from the bottom up. Swap out the two rubber bushings from your OEM light to the new tail light and install that tail light.

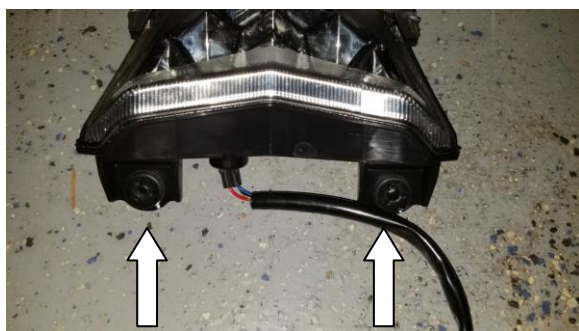

7) Connect the electric connectors: 1) white rectangular plug to black rectangular plug. 2) orange plug to black plug 3) light blue plug to gray plug. Plug in the tail light connector.

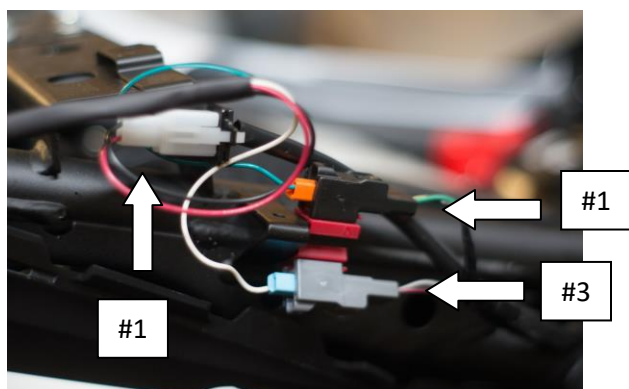

6) Reinstall the rest of the components in reverse order:

-
- 1: (2) 8mm tail light bolts
 - 2: the two rear fairings
 - 3: the front and rear seats
 - 4: license plate

Congratulations on successfully installing your New AVT Ninja 650 Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com