

AVT Yamaha R3 NI Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key.

2) Remove the seat trim by unscrewing two 4mm hex screws. Use a little pressure towards the front seat to pop the trim out of place.




3) Remove the front seat by unscrewing the two 8mm bolts. Lift the seat out of place.



4) Remove the tool tray that is secured with two Philips pop rivets. Lift it out of the way


along with the tool set.

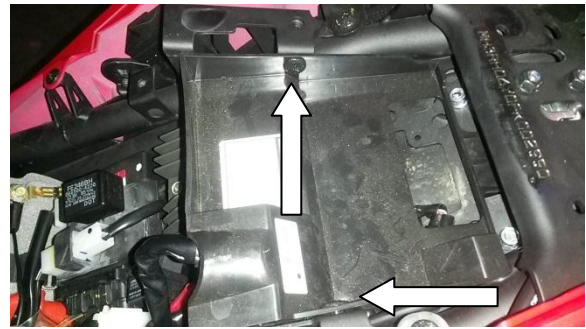

5) Unwrap the electric connectors that are protected by a clear insulator. Unplug the three electric connectors (round black and white, and rectangular white).



6) Remove the OEM fender: Unscrew the four 10mm nuts(you will reuse two of these to attach the new license plate bracket) and lower the fender out of the way as you pull out the 3 electrical cables. *please note how they are routed in order to reinstall the new ones properly.

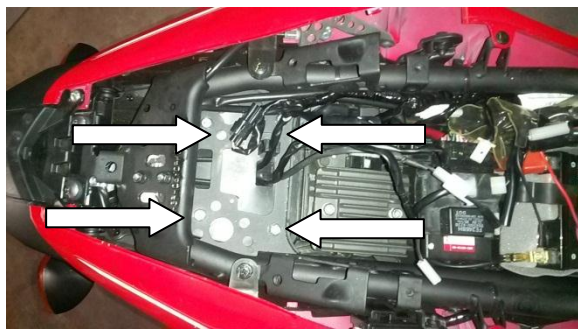

7) Install the new license plate bracket and feed the electrical cable through the opening and feed the cable into the original location. Use two OEM 10mm nuts and the two supplied bolts to secure the bracket(feed the bolts from the bottom).



8) Route the wire bundle from the fender eliminator on the left side of the bike looking from behind and connect the electric connectors: 1)White connector 2) Gray plug to gray plug, black plug to black plug.

9)Reinstall the rest of the components in reverse order:

- 1) tool tray
- 2) front seat
- 3)seat trim
- 4) rear seat
- 5) attach your license plate with supplied bolts and nuts

Congratulations on successfully installing your NewYamaha R3 AVT NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com