


AVT z125 Pro Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key.

2) Unplug the 3 electrical plugs coming out of the OEM fender and tail light plug: 1) black and gray turn signal plugs 2) black license plate light plug(this is covered up with a rubber protective sleeve). black 3 wire tail light plug. 3)remove the two wire tie downs holding the wires going to the OEM sender to the bike.

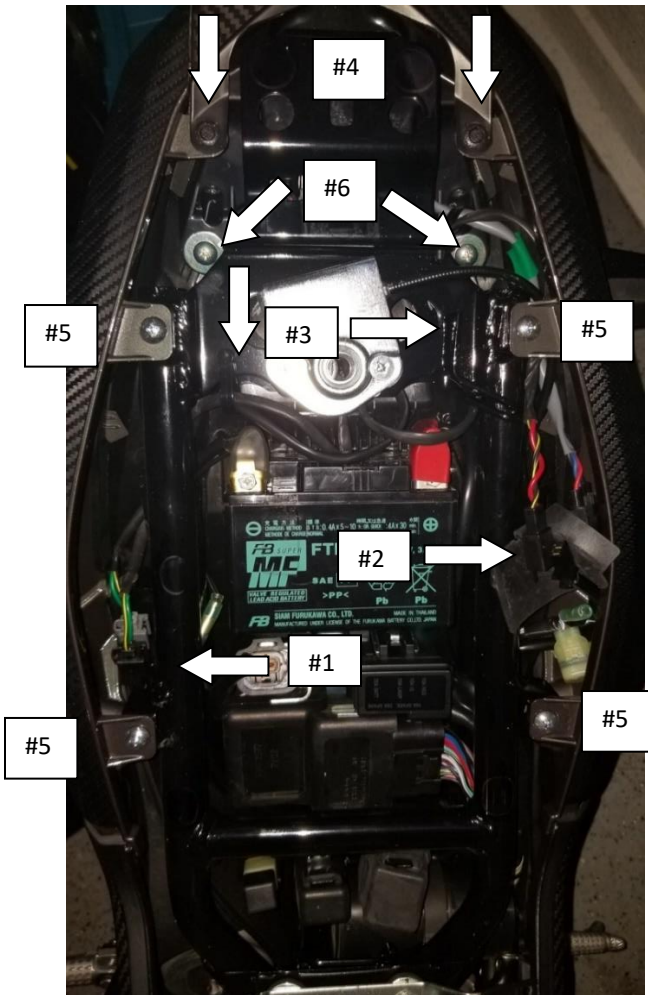


3) Unbolt the 4 bolts holding the OEM fender from the bottom. At this point you can lower the OEM fender out of the way making sure that you have all the wires free to come out.

4) 4)Remove the (2) pop rivets holding the rear tail light fairing. Slide the fairing back and out. 5)Remove the (4) Philips screws holding the side fairings. 6) remove the (2) Philips screws holding the tail light.

5)Pop out the friction fitting shown by pulling out from the bike and slide the rear fairing towards the back to release it from the bike. Repeat on the other side. At this point you should be able to remove the OEM tail light.




6) Remove the (2) round rubber bushings and one rectangular bussing and replace them onto your new LED Light. Install the new LED light just like the OEM one was installed. Re-install the two side fairings.

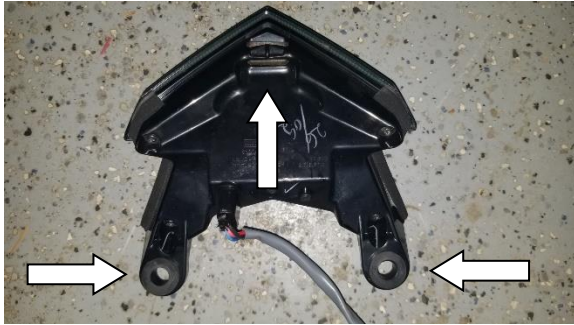

7) Install you new AVT fender eliminator: Feed the wires form your new fender eliminator into the OEM location and attach the fender eliminator bracket with the (4) OEM bolts.

7) Connect the electric connectors: 1) white rectangular plug to black rectangular plug and black tail light plug. 2) orange plug to black plug light blue plug to gray plug. 3) Plug in the tail light plug.

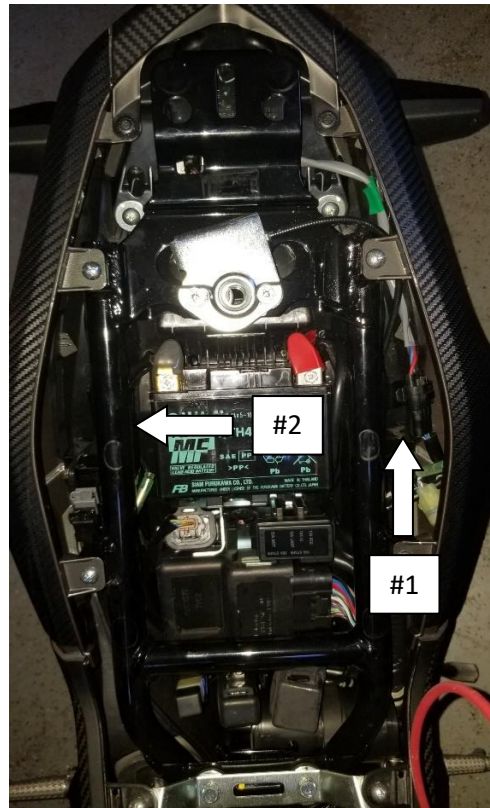

6) Reinstall the rest of the components in reverse order:

- 1: the seat
- 2: license plate

Congratulations on successfully installing your New z125 Pro Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com