


AVT z125 Pro NI Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key.

2) Unplug the 3 electrical plugs coming out of the OEM fender: 1) black and gray turn signal plugs 2) black license plate light plug (this is covered up with a rubber protective sleeve). 3) remove the two wire tie downs holding the wires going to the OEM sender to the bike.

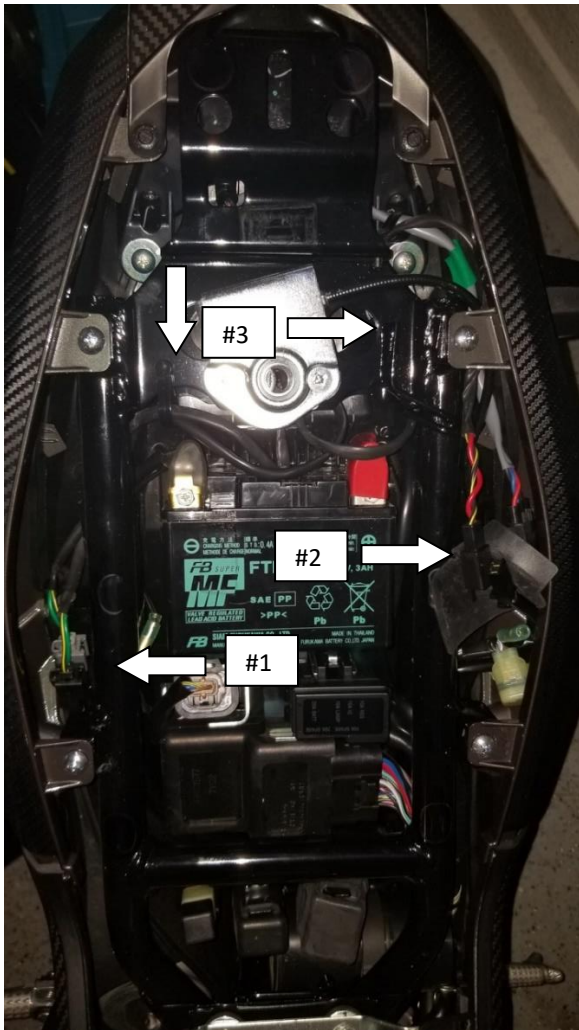

3) Unbolt the 4 bolts holding the OEM fender from the bottom. At this point you can lower the OEM fender out of the way making sure that you have all the wires free to come out.

4) Install your new AVT fender eliminator: Feed the wires from your new fender eliminator into the OEM location and attach the fender eliminator bracket with the (4) OEM bolts.

7) Connect the electric connectors: 1) white rectangular plug to black rectangular plug. 2) orange plug to black plug 3) light blue plug to gray plug.

6) Reinstall the rest of the components in reverse order:

- 1: the seat
- 2: license plate

Congratulations on successfully installing your New z125 Pro NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com