



AVT F650GS Twin Radiator Guard Install Guide

1) Start by installing the bolts/nuts onto the radiator guard. The two shorter bolts go into the two top holes, and the longer bolt into the lower hole. Install two nuts on each bolt as shown (do not tighten any of the nuts at this point).

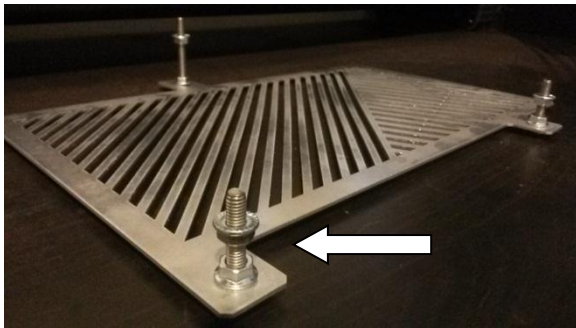

2) Remove the bottom T25 bolt on the radiator. There is an 8mm nut securing it on the reverse side.

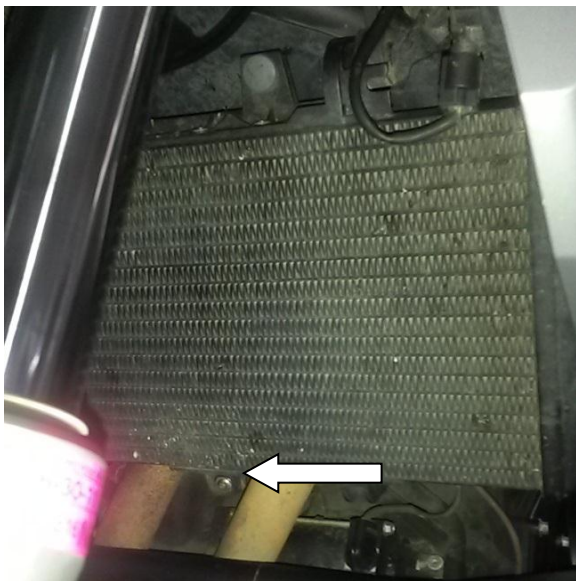

3) Position the radiator guard into place and adjust the nuts that are sitting against the radiator until the guard is flush with the radiator. Install nuts on the reverse side of the bolts and tighten all of them (using Loctite is recommended).



Congratulations on successfully installing your New AVT Radiator Guard!

Thank you for your order, AVT.



www.avt-innovations.com