


# **AVT** GS Hand Grips Install Guide

\*\*\*Please skip to step 3 if your bike is not quieted with hand guards.

- 1) Loosen the hand guards by unbolting the t55 end bolt and loosening the t40 grip bolt.

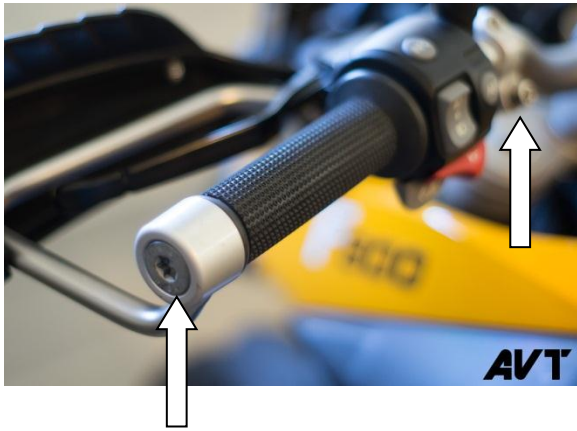

- 2) Lower the hand guard out of the way.



- 3) Prepare your new AVT Grips for installation by rolling them onto a round household object such as a broom handle as pictured:



- 4) Take the rolled up grip and slip it over your bikes hand grip lip and simply unroll it over the grip.



---

5) Repeat the process for other side.

---

6) Reinstall your hand guards if quipped by tightening the t55 and t40 bolts on each side.

**Congratulations on successfully installing your  
New AVT GS Hand Grips!**

Thank you for your order, AVT.



[www.avt-innovations.com](http://www.avt-innovations.com)