


AVT GS Fender/Mug Guard Install Guide

1) Remove your license plate.

2) Remove the (3) T25 torx bolts that secure the OEM license plate bracket and remove the bracket.

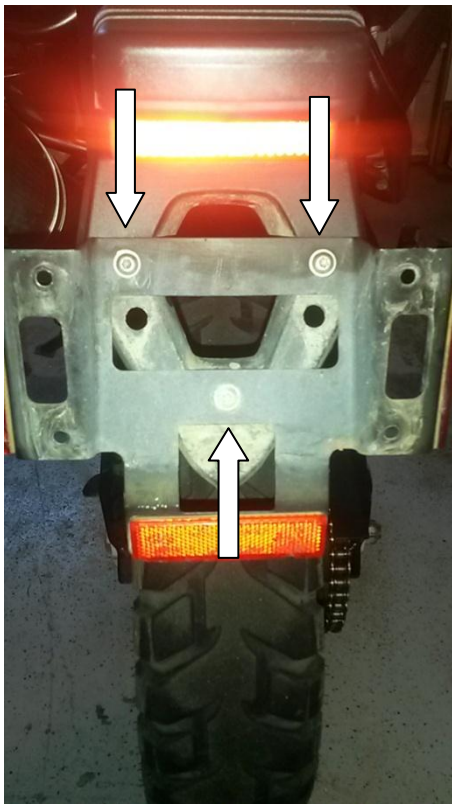

3) Position the AVT fender extender into place of the lower (3) OEM holes and secure it with the (3) OEM bolts and (3) 8mm nuts provided.

4) Reinstall your license plate.

Congratulations on successfully installing your New AVT GS Fender Extender/Mud Flap!

Thank you for your order, AVT.



www.avt-innovations.com