


# **AVT** e46 Scoop Install Guide

1) Open the hood of your vehicle and locate the intake elbow pictured below. 1) With a flathead screwdriver remove the 4 clips that hold down the intake arm by prying up on the heads of the clips. Remove the intake arm out of the way.

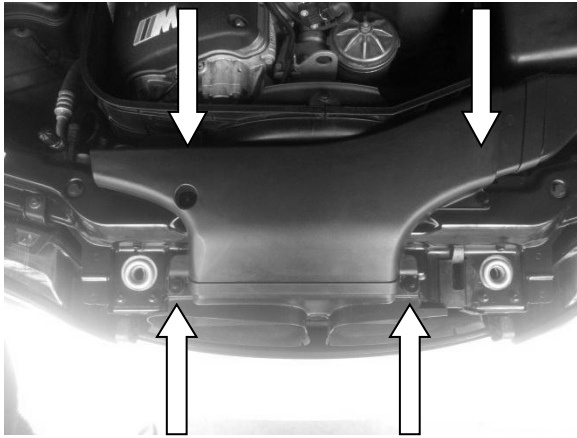

2) Feed the scoop through the left grill. Position the scoop in place, using a pencil mark where the holes for the screws must be drilled.



3) Remove the scoop and drill holes where you marked them.

4) Reposition the scoop into place and secure it with the supplied 4 screws. Reinstall the intake arm and 4 clips.



**Congratulations on successfully installing your  
New AVT scoops!**

Thank you for your order, AVT.



[www.avt-innovations.com](http://www.avt-innovations.com)