



AVT e90/e92 Scoop

Install Guide

1) Open the hood of your vehicle and locate the intake elbow pictured below. Remove the (#1) screws, and (#2) clips. Once the two screws and clips have been removed lift up the intake elbow out of the way.

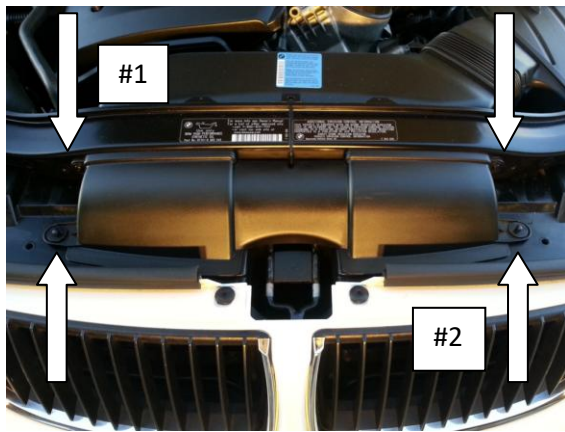

2) Insert the left hand side scoop diagonally into the left grill opening starting from the rear. You may need to apply slight pressure on the front corner of the scope in order to aid it into slipping into the opening. Repeat for the right hand side.

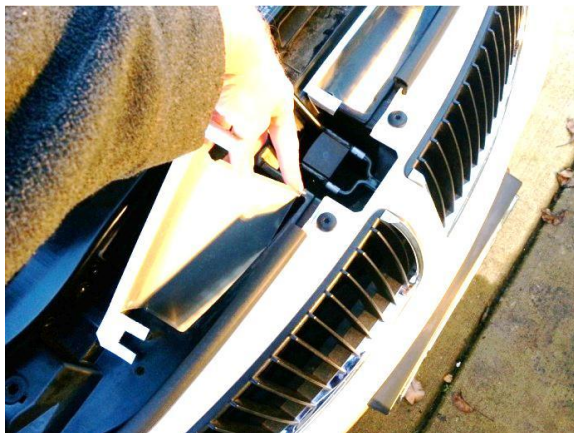

3) Position both the right and left scoops so that both the tab near the hood latch is in position as well as the outer scoop slot is aligned with the clip hole.



4) Place the intake elbow back into position and install the two lower clips making sure that they go through the slots in the scoops. Reinstall the two upper screws.

Congratulations on successfully installing your New AVT scoops!

Thank you for your order, AVT.



www.avt-innovations.com