

# **AVT** z4 Scoop Install Guide

---

1) Start by pulling out the right bumper grill. Do this by pulling outward on it firmly starting in one area and working your way around.

---


2) Remove the OEM air dam located on the right side that is secured by pop rivets.



---

3) Feed the scoop through the opening into the right side grill and secure into place with the

double side tape. \*\*Highly recommended to clean off the area that the scoop is installed to with degreaser and to secure the scoop with the provided self-tapping screw.

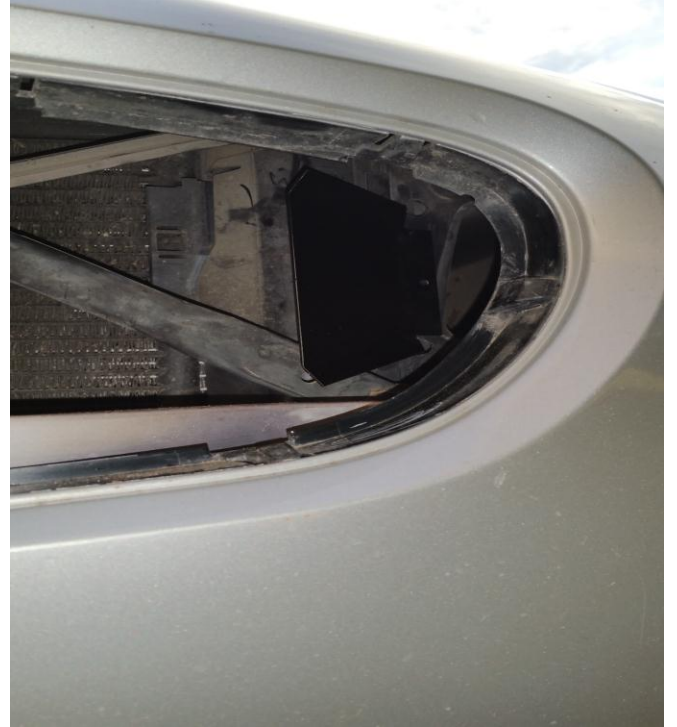

---

4) Reinstall the right grill.

**Congratulations on successfully installing your New AVT scoop!**

Thank you for your order, AVT.



[www.avt-innovations.com](http://www.avt-innovations.com)