


AVT CBR 250R NI Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key.


2) Remove the fender liner that is secured by two pop rivets (press on the center of them and then pull them out).



3) Remove the top tail light cover. It is secured with three screws. Slide it towards the back of the bike and remove.

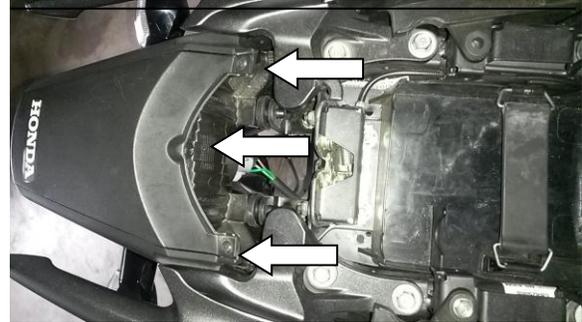

4) Remove the passenger handle bars by unbolting the (4) 12mm Bolts.

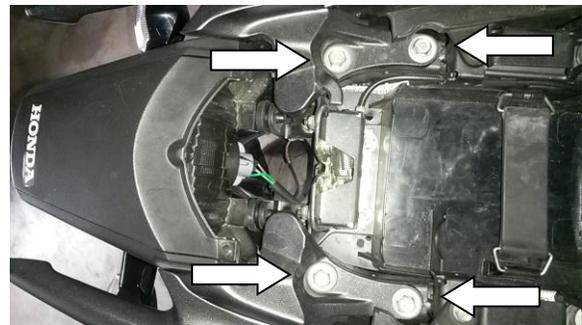


5) Remove the OEM fender. It is secured with:

Top:


1) Two screws

2) Two 12mm bolts

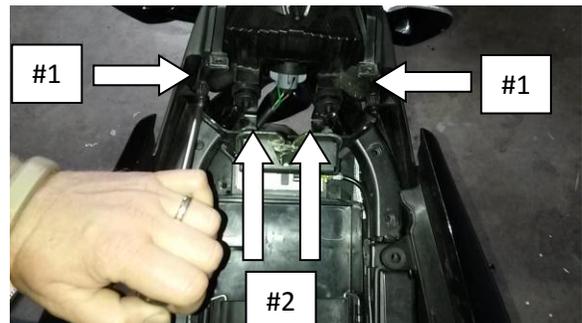

Bottom:

- 1) Three screws
- 2) One 12mm Bolt

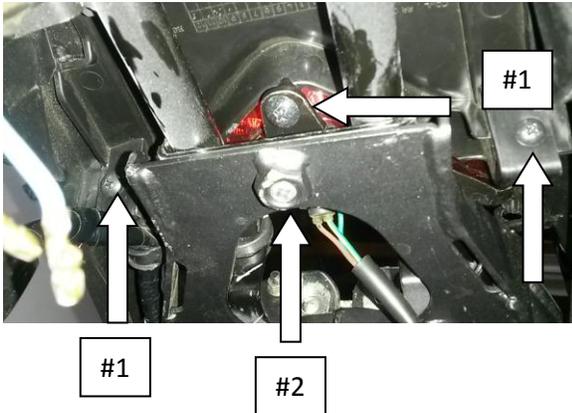

*The bottom 12mm bolt is easiest removed by removing the bottom center tail light cover as shown:



6) Unplug the electrical connectors and remove the OEM fender.

7) Remove the tail light from the OEM fender assembly and reposition it within the tail of the bike and secure it with the original (3) screws.



8) Reinstall the center tail light cover and the (3) bottom original screws.




9) Connect the electric connectors:

- 1) Reconnect the OEM tail light plug
 - 2) Black AVT fender eliminator wires into the Green OEM wires
 - 3) Red AVT fender eliminator wire into the Brown OEM wire.
 - 4) Yellow AVT wire into the Orange OEM wire.
 - 5) Yellow AVT wire with Black mark into the Blue OEM wire.
-

10) Feed the Electrical Harness into the inner fender.



11) Remove the tape cover and position the AVT fender eliminator into place on top of the metal rear frame bracket and secure with one of the OEM 12mm bolts.

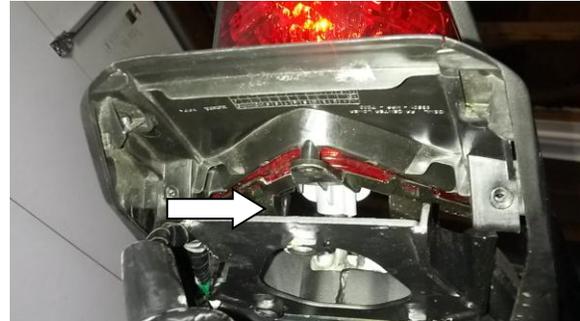

12) Reinstall the rest of the components in reverse order:

- 1) Passenger handle bars
 - 2) Top Tail Light Cover
 - 3) Passenger seat
-

Congratulations on successfully installing your New CBR 250R AVT NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com