


# **AVT** CBR500R NI Fender Eliminator Install Guide

---

1) Remove the rear seat with your motorcycle key.

---

2) #1 Unplug the white, Blue, and orange plugs in the harness that is towards the tail of the bike. 2) Remove the (4) #5 hex bolts holding the fender.

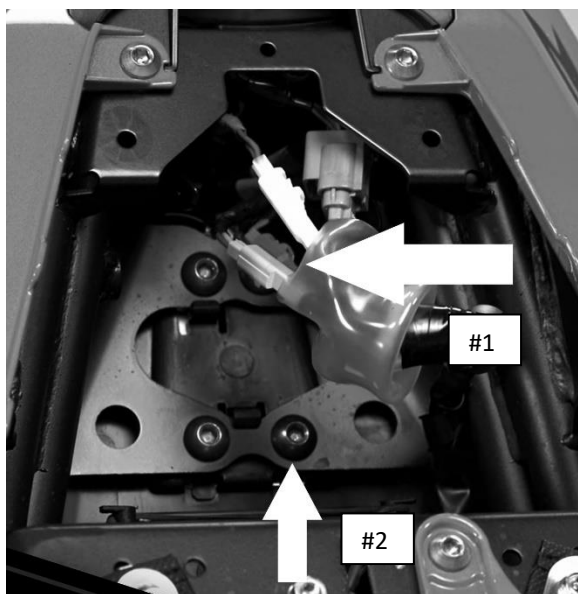

3) Lower the OEM tail out of the way.

---

6) Install you new AVT fender eliminator: Feed the wires form your new fender eliminator into the OEM location and attach the fender eliminator bracket with the (4) OEM #5 hex bolts and nuts provided. You will need to push up on the metal bracket to make it sit flush with the bike. Feed the bolts from the botom up.

---

7) Connect the electric connectors: 1) light blue plug with black and red wire to white plug. 2)orange plug to orange plug 3) light blue plug to light blue plug.

---

6) Reinstall the rest of the components in reverse order:

- 1: rear seats
  - 4: license plate
- 

**Congratulations on successfully installing your New CBR500R AVT NI Fender Eliminator!**

Thank you for your order, AVT.



[www.avt-innovations.com](http://www.avt-innovations.com)