


AVT CBR650F / CB650F Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key.

2) #1: Unplug the orange, white, and light blue plugs. #2: remove the (3) hex bolts holding the OEM fender. Lower the fender out of the way and note how the wires were routed/fastened. #3: Remove the (2) nuts holding the tail light, unplug it and pull it out towards the rear of the bike.

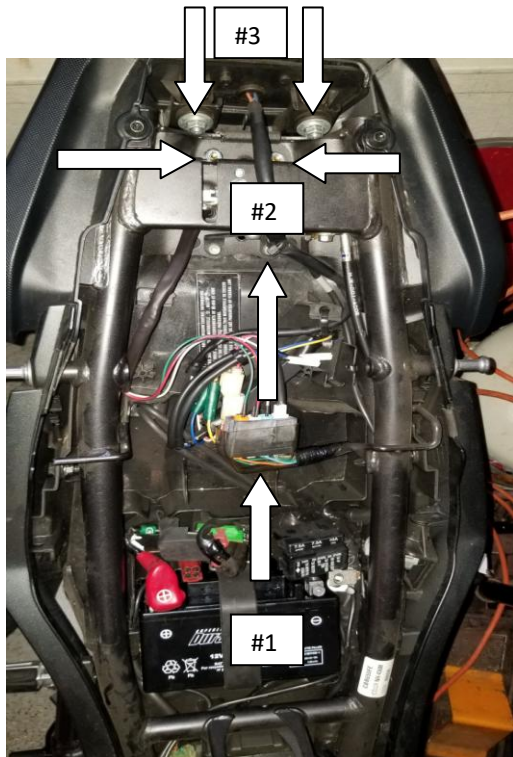

3) Route the fender eliminator wires into the bike from the bottom and secure the fender with (2) stock bolts and nuts provided. Reinstall the (2) tail light nuts.

4) Connect the electrical connectors: #1: orange plug to orange plug #2: blue plug with red and black wire to white plug #3: blue plug to blue plug #4 plug in the tail light connector with the 3 wires.

5) Install your seat back on the bike.

Congratulations on successfully installing your New AVT CBR650F / CB650F Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com