


AVT CBR650F / CB650F NI Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key.

2) #1: Unplug the orange, white, and light blue plugs. #2: remove the (3) hex bolts holding the OEM fender. Lower the fender out of the way and note how the wires were routed/fastened.

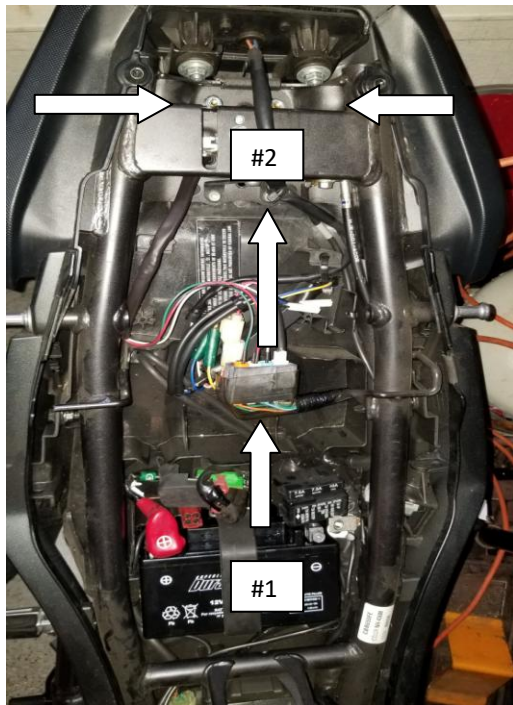

3) Route the fender eliminator wires into the bike from the bottom and secure the fender with (2) stock bolts and nuts provided.

4) Connect the electrical connectors: #1: orange plug to orange plug #2: blue plug with red and black wire to white plug #3: blue plug to blue plug.

5) Install your seat back on the bike.

**Congratulations on successfully installing your
New AVT CBR650F / CB650F Fender Eliminator!**

Thank you for your order, AVT.



www.avt-innovations.com