


AVT Honda CBR650F LED Front Turn Signal Install Guide

1) Look on the inside of the front fairings where the turn signals are located and find the turn signal connectors. #1: Unplug the connectors. #2: unbolt the turn signals (10mm nut under rubber cover). Pull the wiring out of the fairing (note how it is routed) and pull out the turn signal assembly.

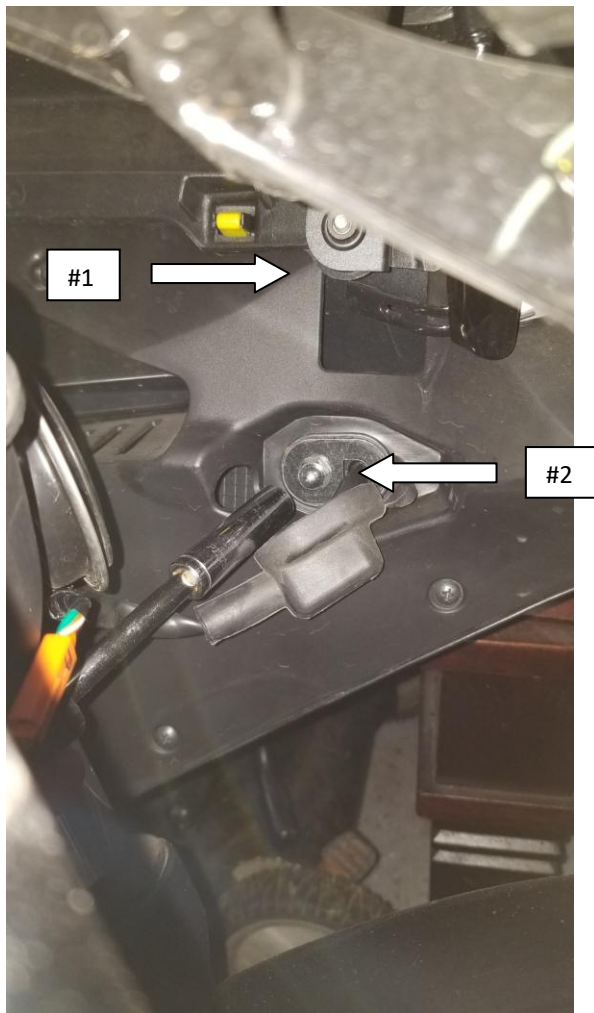

2) Remove the rubber garment that is in the fairings by pushing it out with a screw driver starting from the middle. You want it to come out towards the outside of the bike. Be careful not to damage anything as you do this.



3) Slip on one of the provided spacers onto your new LED turn signal and feed the wiring through the fairing from the outside in. Slip another spacer onto the turn signal and secure with the nut.

4) Feed the wiring through the fairing as it was with the OEM turn signal (this is optional). Plug in the turn signal connector.

Congratulations on successfully installing your New AVT Honda CBR650F Front Turn Signals!

Thank you for your order, AVT.



www.avt-innovations.com