


# **AVT** Yamaha FZ-07 LED Front Turn Signal Install Guide

---


1) Remove (4) hex bolts on the front of the headlight fairing.

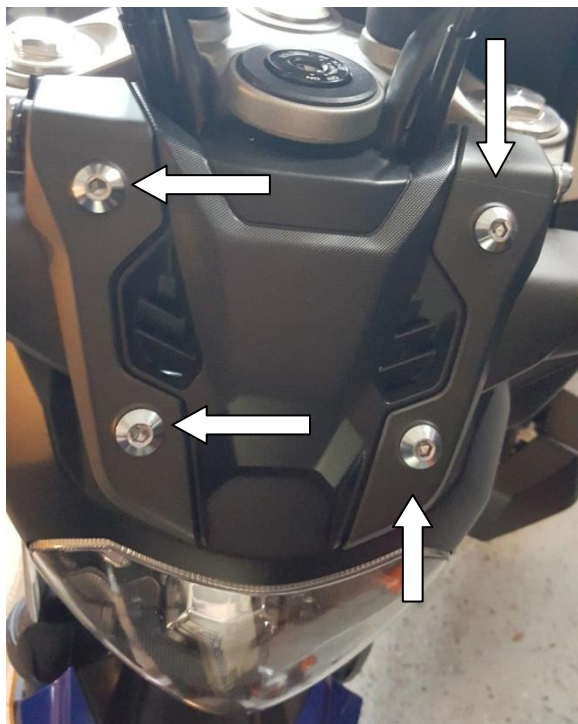

2) Remove the (2) 5mm hex bolts and the (2) 4mm hex bolts on both of sides of the headlight fairing. Lower the headlight assembly down and leave it hanging by the wiring.




3) Open up the wire cover and unclip the black and gray plugs. Pull out both the turn signals with along with their housings.

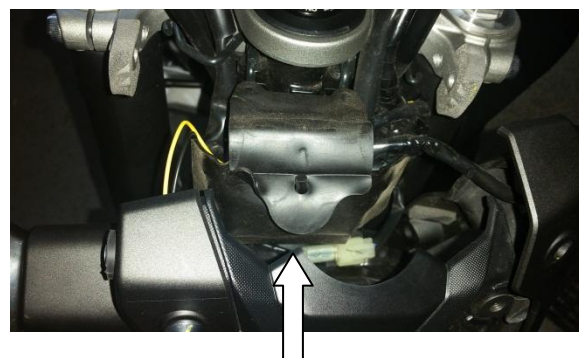

---

4) Remove the tab that holds the turn signals to the housings. Just pry up on it with a screwdriver. Remove the OEM turn signals.

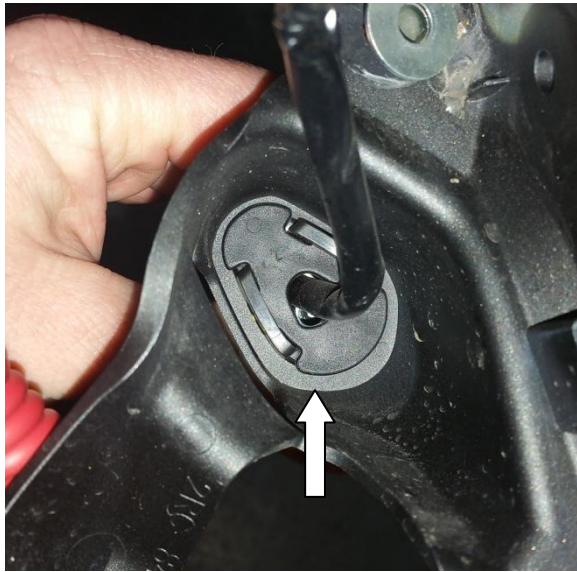


---

5) Position the provided adapter into the turn signal housing as shown.




---

6) Feed the wires from the LED turn signal through the adapter and secure the turn signal as shown (If you have the NON-FLUSH turn signals slide the flat adapter on the turn signal bolt before installing the light).

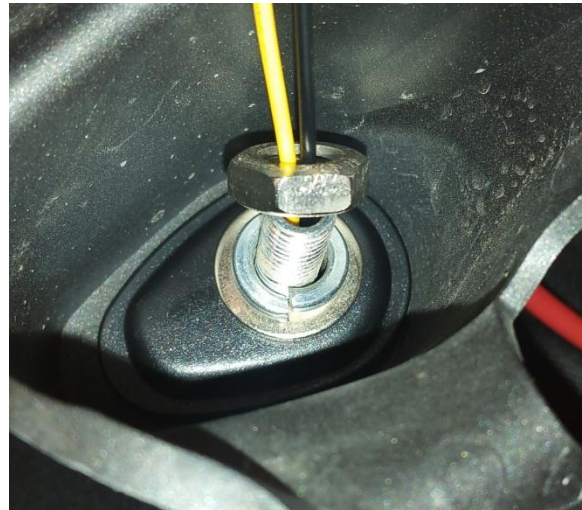

---

7) Plug the terminals of the turn signal wires into the plug adapter. There is a small nip that needs to be aligned with a groove in the adapter. Looking down the front you want the wires to be plugged in as shown. (\*Black plug is for the right turn signal, gray plug for the left as seen if you are sitting on the bike).

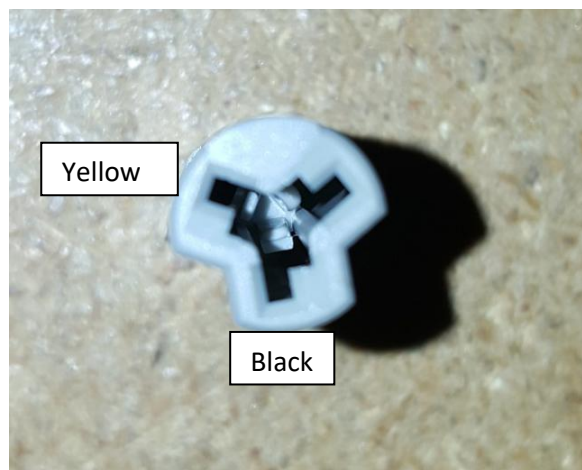

---

8) Position the turn signals back on the bike and plug in the connectors to the appropriate colors. Reinstall the rest of the components is the reverse of the removal. (\*\*We provide some heat shrink that is recommended to be installed onto the turn signal as shown to help waterproof it. You do need a heat gun or hair dryer to shrink it).



---

**Congratulations on successfully installing your  
New AVT Yamaha FZ-07LED Front Turn Signals!**

Thank you for your order, AVT.



[www.avt-innovations.com](http://www.avt-innovations.com)