


AVT Ninja 636NI Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key.

2) Pull back boot and unplug the 3 electrical plugs coming out of the OEM fender but not the tail light connector (#1 in the diagram). If you cannot reach the connectors it may be easier to remove the panel that covers them.

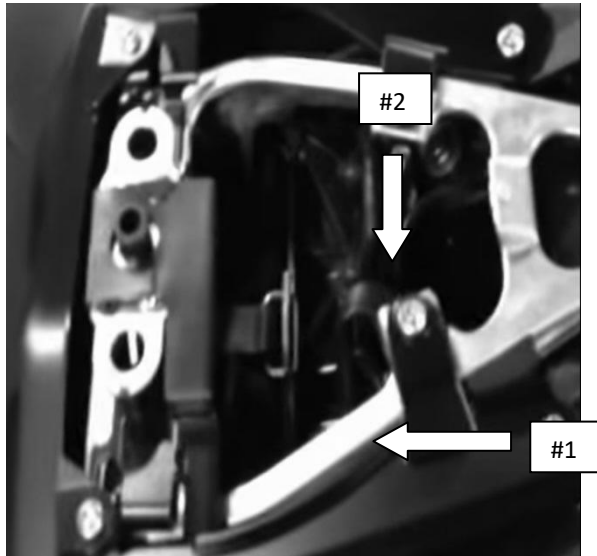

3) Remove the OEM fender. You will need to remove: (4) bolts from the top and any clips. (#2 in the diagram). Lower it out of the way.

4) Feed the wires from your new fender eliminator and attach the fender eliminator bracket with the (2) 10mm bolts from the OEM fender and nuts provided. Feed the bolts from the bottom up.

5) Connect the electric connectors: 1) white rectangular plug to black rectangular plug. 2) orange plug to black plug 3) light blue plug to gray plug.

6) Reinstall your rear seat and license plate.

Congratulations on successfully installing your New Ninja 636 AVT NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com