



AVT Ninja 650 Fender Eliminator Install Guide

1) Remove the seat with your motorcycle key.

2) Remove the tail light cover by taking out the two pop rivets.

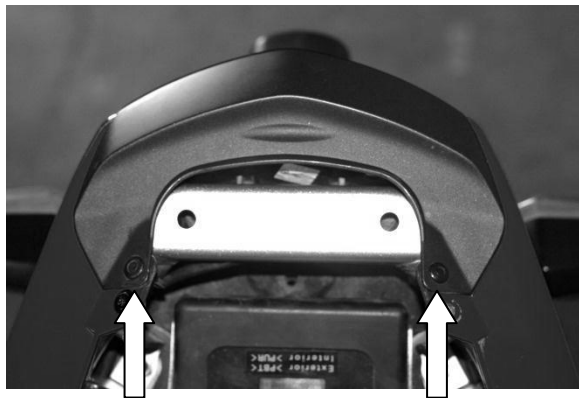


3) Remove the right and left rear fairings. They are secured with 2 pop rivets and one Philips screw. First pop out the front side of the fairing and then push it towards the rear of the bike to get it off.

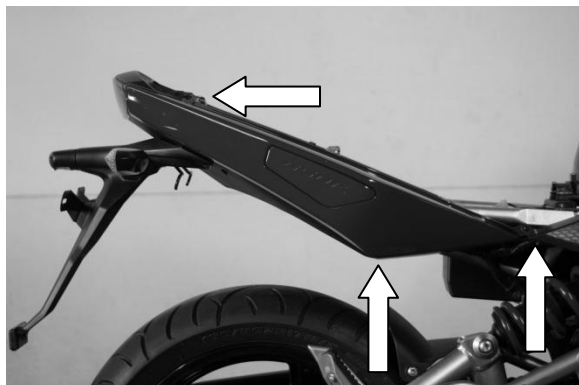


4) Unplug the four pictured electric harness under the rear right fairing(it may make it easier to figure out which ones to unplug by tracing


back the wires from the OEM fender and tail light.

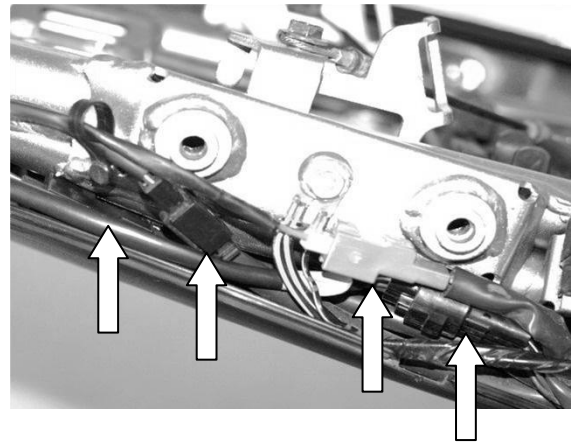


5) Remove the OEM fender and tail light. You will need to remove: Fender: (2) 10mm nut from the top, (2) #25 torx bolts, and (1) pop rivet on the bottom of the OEM fender. Tail light: (2) 10mm bolts.

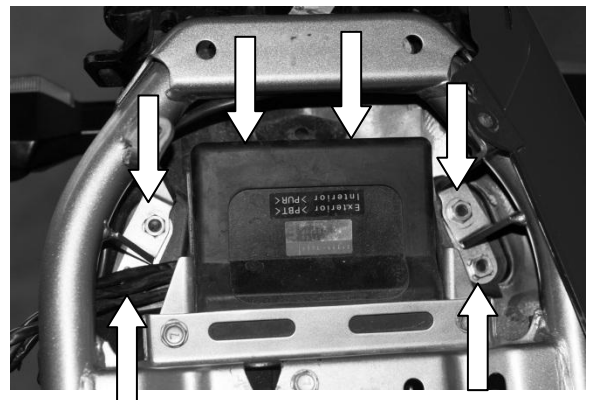


6) Attach the fender eliminator brackets with the (2) #25 torx bolts and nuts you just removed in the last step. Do not yet fully tighten the bolts.

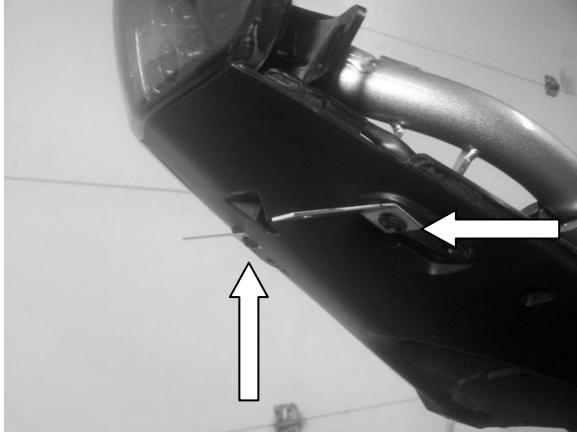

7) Attach the fender eliminator. First feed the wires through the opening, and route them back in the OEM location. Secure the fender eliminator with (2) of the supplied bolts and nuts. Once you have proper alignment of the fender eliminator and brackets tighten all of the bolts.

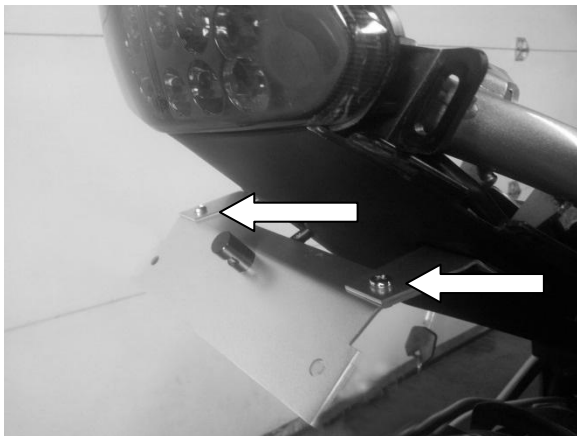

8) Take out the rubber inserts from the OEM tail light and install them in the same way into the LED tail light. Reinstall the new tail light.

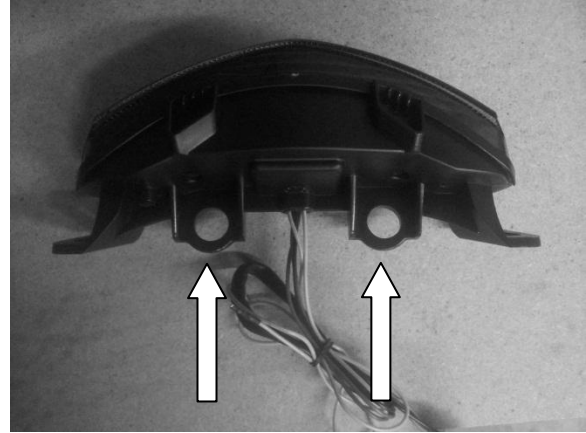

9) Connect the electric connectors: 1) white rectangular plug to black rectangular plug. 2) orange plug to black plug 3) light blue plug to gray plug. Plug in the tail light connector.

Reinstall the rest of the components in reverse order:

- 1) rear fairings
- 2) tail light cover
- 3) seat

Congratulations on successfully installing your New Ninja 650 AVT Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com