


AVT Ninja 650 NI Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key.

2) Pull back boot and unplug the 3 electrical plugs coming out of the OEM fender (Diagram #1).

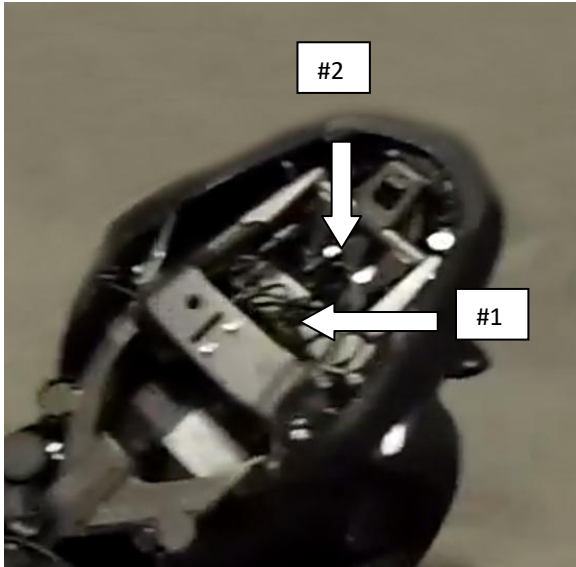

3) Remove the OEM fender. You will need to remove: (3) 10mm bolts from the top, (1) Philips screw from the bottom (Diagram #2).

4) Feed the wires from your new fender eliminator and attach the fender eliminator bracket with the (2) 10mm bolts from the OEM fender and nuts provided. Feed the bolts from the bottom up.

5) Connect the electric connectors 1) white rectangular plug to black rectangular plug. 2) orange plug to black plug 3) light blue plug to gray plug.

6) Reinstall your rear seat and license plate.

Congratulations on successfully installing your New Ninja 650 AVT NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com