

AVT Ninja 650 NI Fender Eliminator Install Guide

1) Remove the seat with your motorcycle key.



2) Remove the tail light cover by taking out the two pop rivets.




3) Remove the right rear fairing. It is secured with 2 pop rivets and one Philips screw. First pop out the front side of the fairing and then push it towards the rear of the bike to get it off.



4) Unplug the three pictured electric harness (it may make it easier to figure out which ones to unplug by tracing back the wires from the OEM fender).

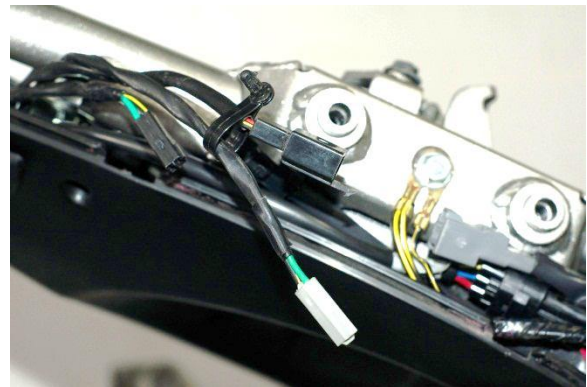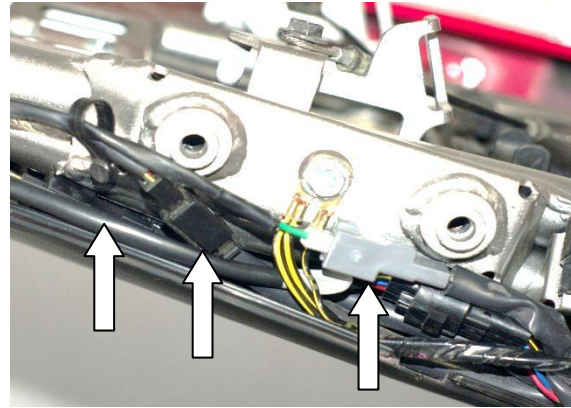

5) Remove the OEM fender. You will need to remove: (2) 10mm nut from the top, (2) #25 torx bolts, and (1) pop rivet on the bottom of the OEM fender.

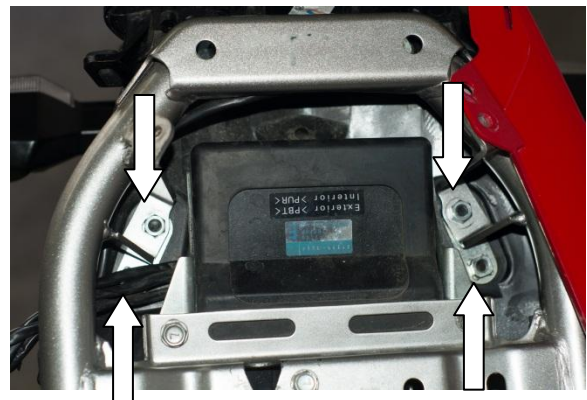

6) Attach the fender eliminator brackets with the (2) #25 torx bolts and nuts you just removed in the last step. Do not yet fully tighten the bolts.



7) Attach the fender eliminator. First feed the wires through the opening, and route them back in the OEM location. Secure the fender eliminator with (2) of the supplied bolts and nuts. Once you have proper alignment of the fender eliminator and brackets tighten all of the bolts.



8) Connect the electric connectors: Connect the electric connectors 1) white rectangular plug to black rectangular plug. 2) orange plug to black plug 3) light blue plug to gray plug.

Reinstall the rest of the components in reverse order:

- 1) rear right fairing
- 2) tail light cover
- 3) seat

Congratulations on successfully installing your New Ninja 650 AVT NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com