



AVT e36 Scoop Install Guide

1) Open the hood of you vehicle and locate the top grill opening cover pictured below. With a Philips screwdriver remove the 2 clips on top and 2 Philips screws on the bottom. Remove the cover out of the way.

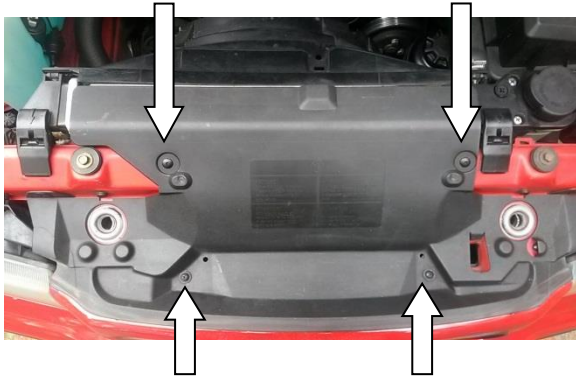

2) Feed the scoop through the opening into the right side grill and secure into place with the double side tape.

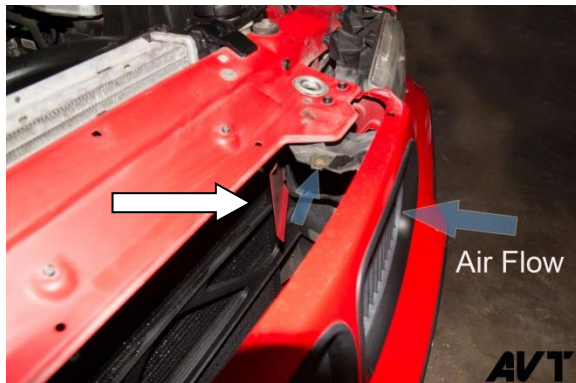

**Congratulations on successfully installing your
New AVT scoops!**

Thank you for your order, AVT.



www.avt-innovations.com