



AVT TNT 125 / 135 Fender Eliminator Install Guide

1) Remove the front seat with your motorcycle key. Remove the rear seat by unscrewing (2) Hex bolts.

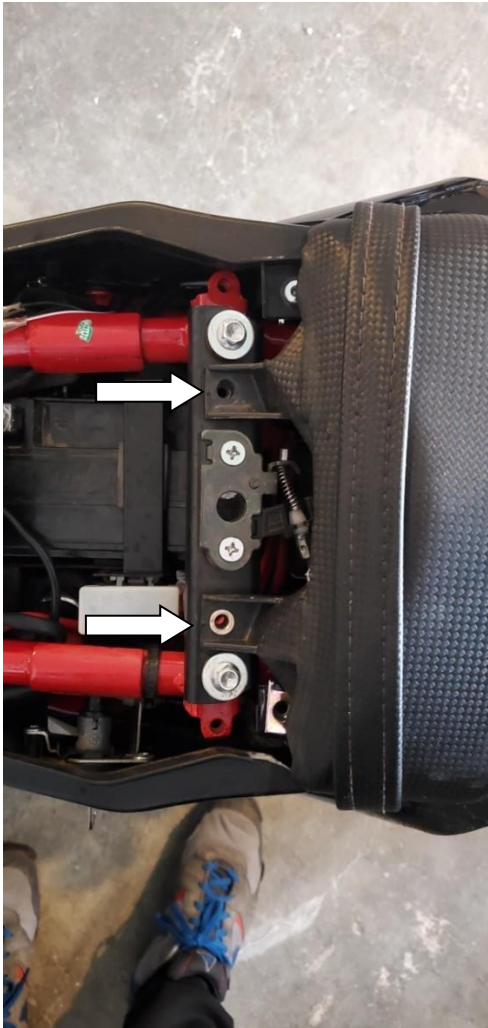

2) There is a wire that runs from the rear mud flap on the right side of the bike. Trace it from the back to where it plugs into the bike under the front seat on the right side by the frame.


Unplug it and remove the wire until its fully free.

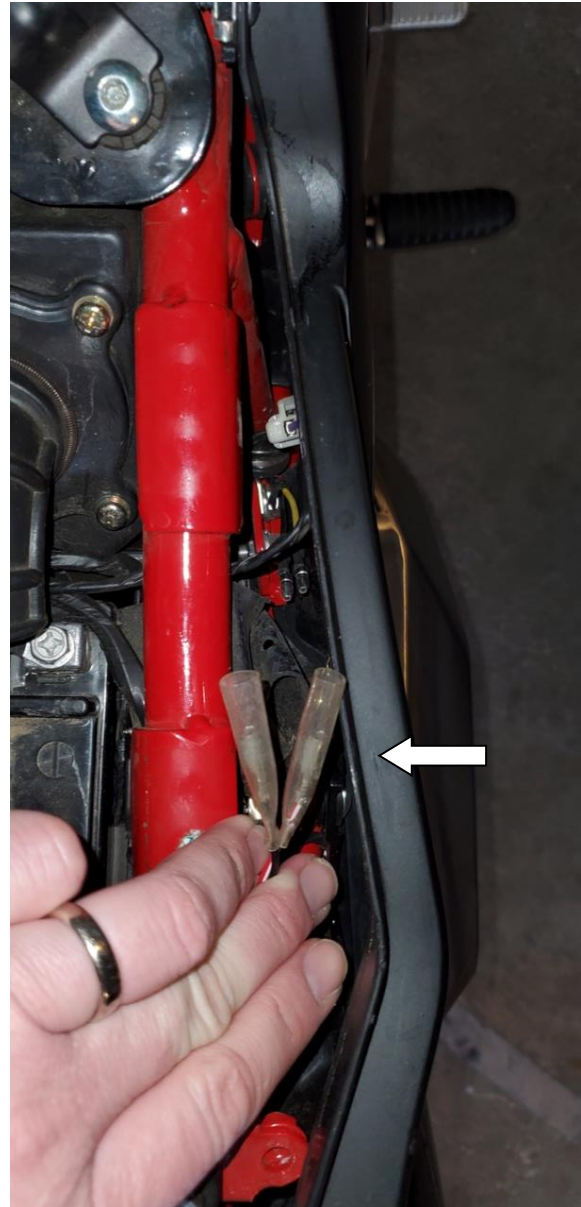

3) Remove the 4 bolts securing the mud flap((2) on each side) and lift it out of the way.



4) Remove the (3) OEM fender bolts.

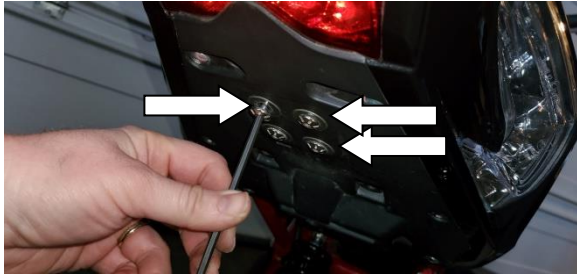

6) Install your new AVT fender eliminator: Feed the wires from your new fender eliminator into the OEM rear bolt hole. You will probably need to unplug the ECU connector that is under the rear seat to get it router. Plug in the license light into the OEM plugs. Red wire to red, black to black.



7) Secure the fender eliminator bracket with (2) OEM bolts and reinstall seats and the ECU plug if removed.

Congratulations on successfully installing your New TNT 125 / 135 Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com