


AVT z900 Fender

Eliminator Install Guide


1) Remove the rear seat with your motorcycle key. Remove the front seat by releasing it with the silver pull lever that's under the rear seat in the center.

2) You are ready to remove the rear plastic fairing. There are (4) 4mm hex bolts that need two be removed as well as (2) Philips screws. Slide the entire fairing to the back and then up.

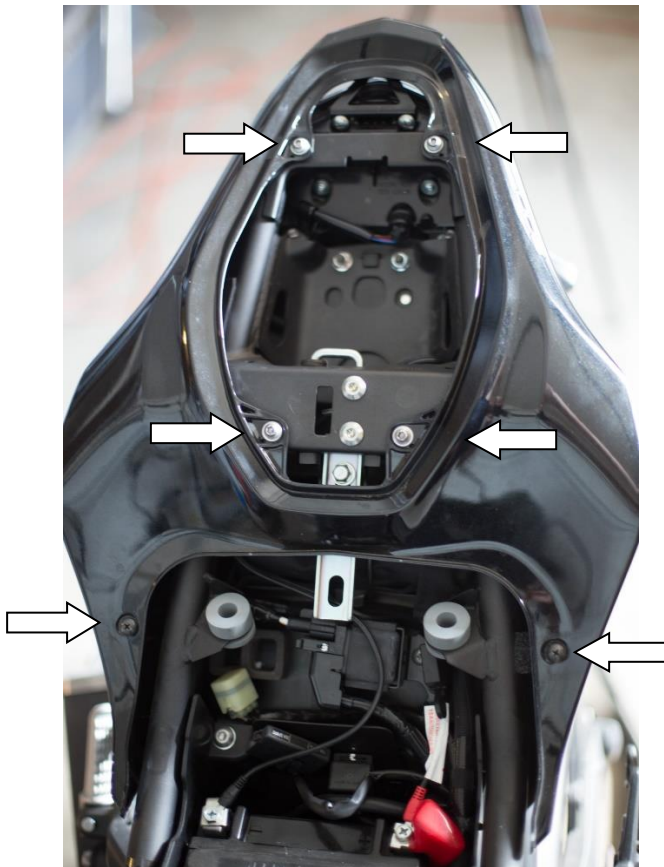


3) 1) Under the black hood are three plugs you need to unplug. A smaller square gray plug,

black plug, and a larger rectangular black plug. 2) Remove the (4) bolts holding the fender and lower it out of the way noting how the wires where routed.

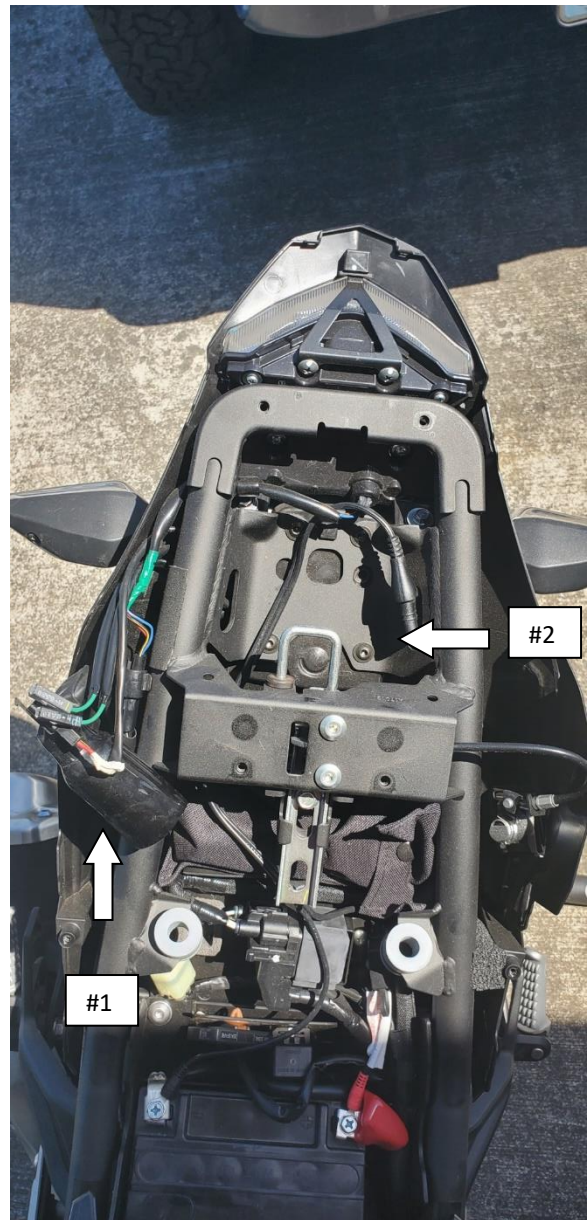


4) Remove the (2) Phillips screws that are on top securing the tail light followed by (2) 8mm

bolts that secure it on the bottom.

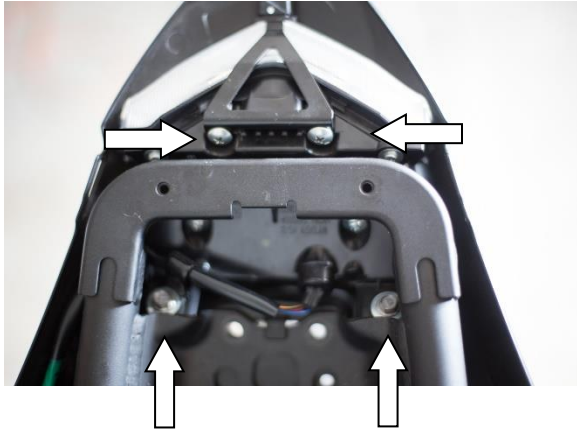

5) Unplug the tail light and remove it from the rear bottom fairing. Switch out the rubber gromets from the OEM light into your new integrated turn signal LED light.

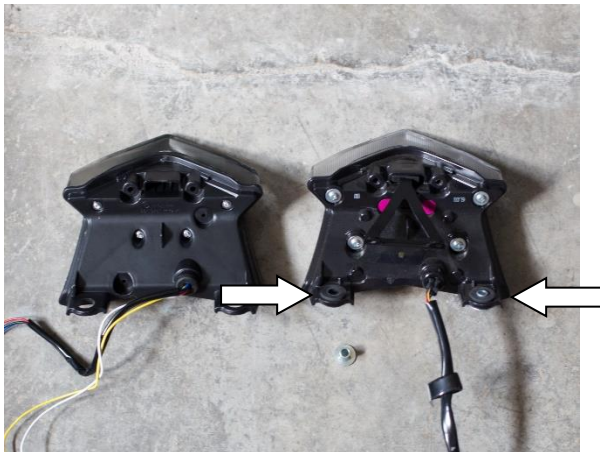

6) Install the integrated turn signal tail light into the OEM location and plug it in. Install your new fender eliminator bracket into the OEM location: Run the wires as they were with the OEM fender. Secure it with the (2) OEM hex bolts and the nuts provided.

7) Connect the electric connectors: 1) white rectangular plug to black rectangular plug.

2) orange plug with black mark to black plug 3) orange plug to gray plug.

8) Reinstall the rest of the components in reverse order:

- 1: Rear fairing
- 2: Seats
- 3: License plate

Congratulations on successfully installing your New z900 Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com