


AVT z900 NI Fender Eliminator Install Guide


1) Remove the rear seat with your motorcycle key. Remove the front seat by releasing it with the silver pull lever that's under the rear seat in the center.

2) You are ready to remove the rear plastic fairing. There are (4) 4mm hex bolts that need to be removed as well as (2) Philips screws. Slide the entire fairing to the back and then up.

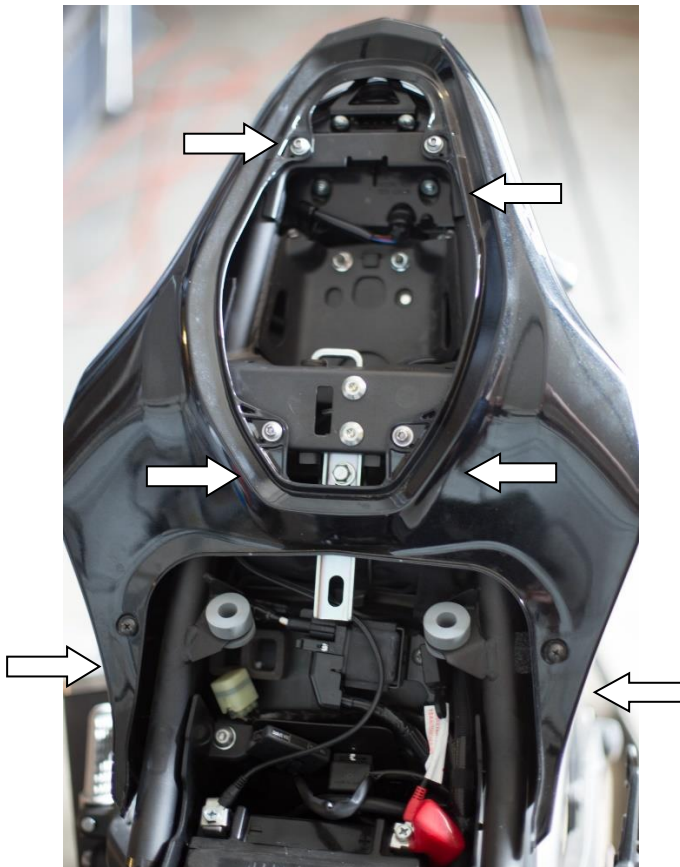

3) 1) Under the black hood are three plugs you need to unplug. A smaller square gray plug,

black plug, and a larger rectangular black plug.
2) Remove the (4) bolts holding the fender and lower it out of the way noting how the wires where routed.

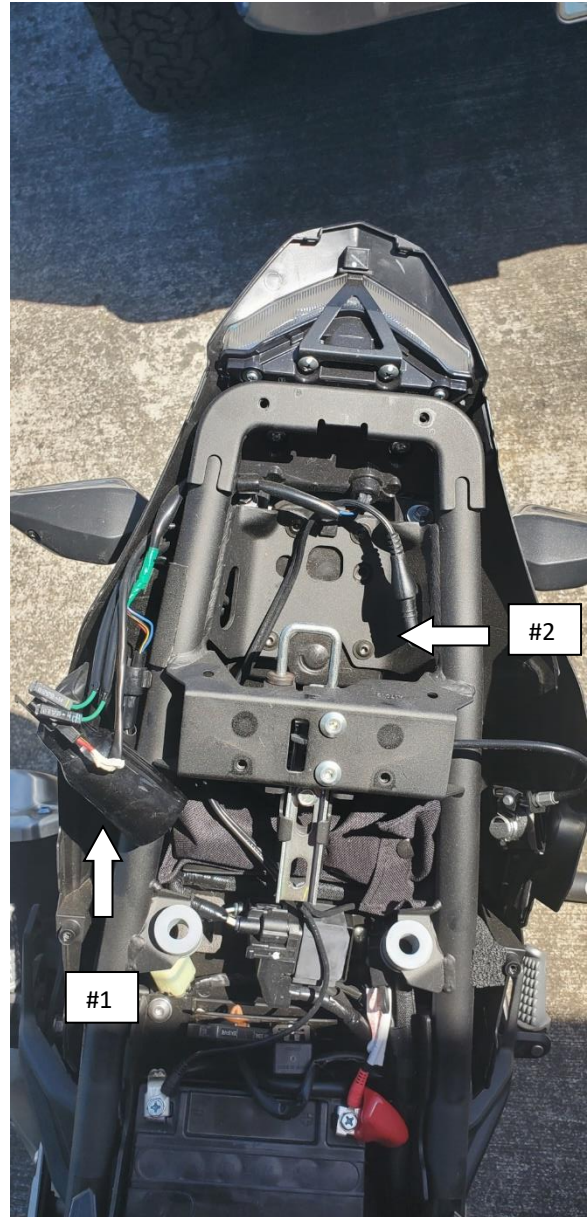

4) Install your new fender eliminator into the OEM location: Run the wires as they were with

the OEM fender. Secure it with the (2) OEM hex bolts and the nuts provided.

5) Connect the electric connectors: 1)white rectangular plug to black rectangular plug. 2)orange plug with black mark to black plug 3) orange plug to gray plug.

6) Reinstall the rest of the components in reverse order:

- 1: Rear fairing
 - 2: Seats
 - 3: License plate
-

Congratulations on successfully installing your New z900 NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com