


AVT z900 Front LED

Install Guide

1) Remove the (4) 4mm hex bolts holding the wind screen.

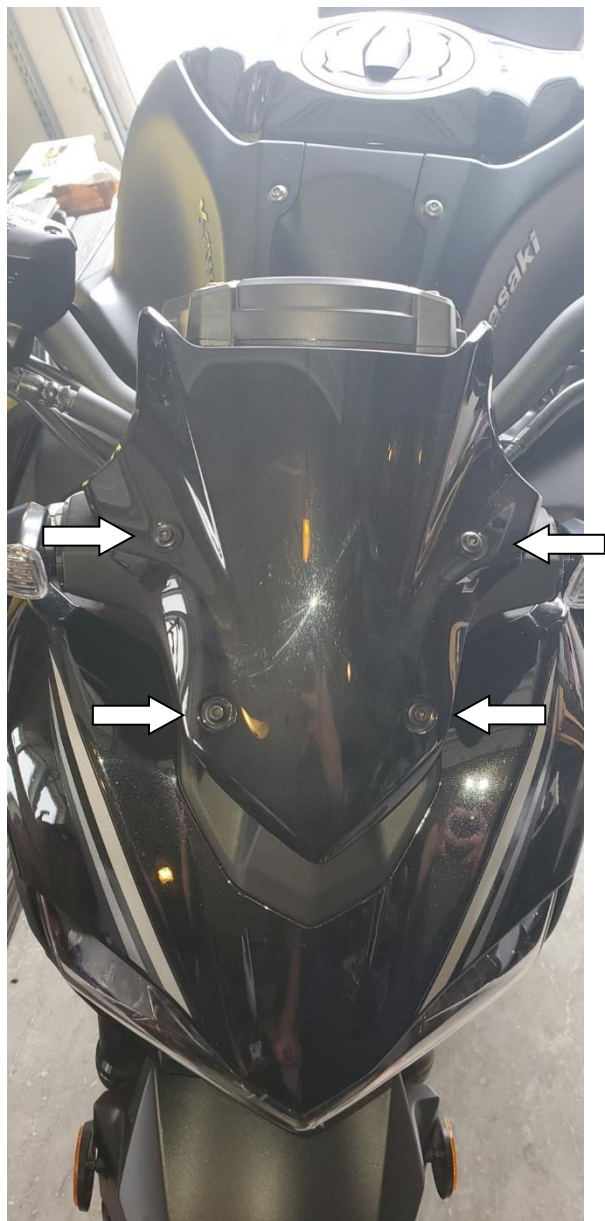

2) Unplug the (2) turn signal plugs and remove the Phillips screws holding the turn signals.



3) Once the Phillips screw is removed the only thing that's holding the turn signal is two metal spacers. Pry these spacers out with a flat head screw driver and then twist the turn signal out of the fairing.

4) Install the LED turn signal by first putting on one of the spacers with the protrusion, then putting it onto the fairing. Next put a flat spacer on and tighten the nut.



6) Once both LED's are installed and plugged in reinstall the wind screen.

Congratulations on successfully installing your New z900 Front LED Kit!

Thank you for your order, AVT.



www.avt-innovations.com