


AVT Grom NI Fender Eliminator Install Guide

1) Remove the rear seat with your motorcycle key.

2) #1: Unplug the electrical black plugs coming out of the OEM fender. Remove any wire tie downs holding the wires going to the OEM fender to the bike. #2: Remove the 4 bolts holding the OEM fender to the bike and lower it out of the way. #3: Replace the LED relay.

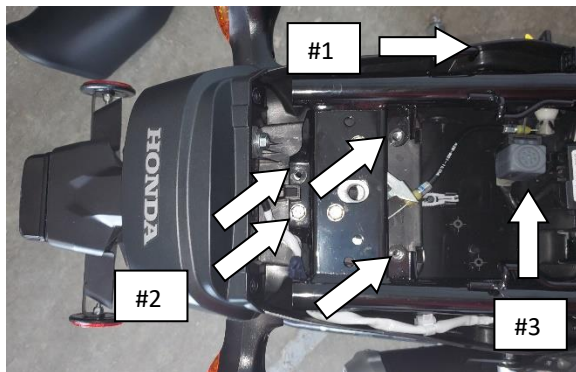

3) Install your new AVT fender eliminator: Feed the wires from your new fender eliminator into the OEM location and attach the fender eliminator bracket with (2) OEM bolts and nuts provided.

4) Connect the electric connectors: black plug from the fender eliminator into the black plug on the bike.

5) Reinstall the rest of the components in reverse order:

- 1: the seat
- 2: license plate



SAFETY WARNING

Ensure that all of the OEM and new lights function properly before your first ride! ANY electronics can fail. That's why every motorcycle safety course will teach that it's the riders responsibility to check all the safety equipment of the bike before getting on every time you ride(including break light and turn signals). They also teach you that for the most part car drivers do not "see" a motorcycle at all! Most drivers are unfortunately just not looking for motorcycles; turn signal/break light on or not. It's our responsibility to make sure to ride defensively and assume that no one sees us!

Congratulations on successfully installing your New Grom NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com