


AVT z125 Pro LED Front **Turn Signal Install Guide**


1) Remove the (2) hex bolts holding the headlight fairing on and tilt it forward. There is (1) hex bolt per side.



2) Remove the turn signal rubber garment that is in the fairings by prying out the metal insert with a screw driver starting from the middle. You will then want to grab the entire turn signal and twist it out of the fairing. A fair amount of pressure is needed but be careful not to crack the fairing.

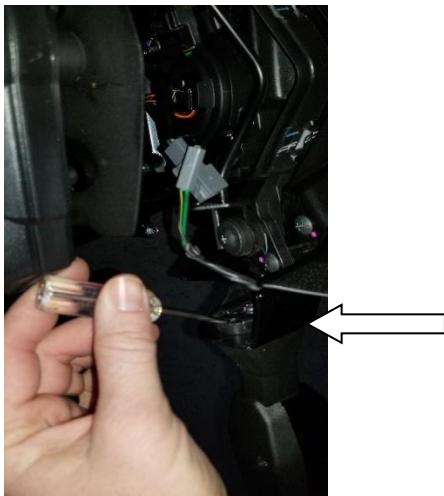

3) Unplug both turn signals and free the wiring and remove the turn signals.

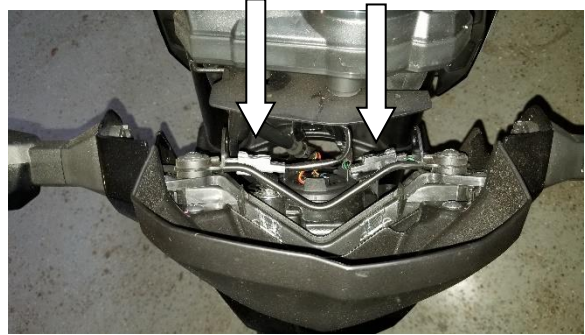

4) Install the new turn signal by placing one of the adapters with the protrusion onto the turn signal wiring. Place the turn signal onto the fairing and put a flat adapter on the other side and secure it with the nut.



Plug in the turn signals and reinstall the two hex bolts holding the fairing. Ensure that the turn signals operate. If you also have rear LED turn signals you will need to add an LED relay for the turn signals to work.

**Congratulations on successfully installing your
New AVT z125 Pro Front Turn Signals!**

Thank you for your order, AVT.



www.avt-innovations.com