

AVT Yamaha MT-07 LED Front Turn Signal Install Guide

1) Remove (4) 5mm Hex bolts on the left and right turn signal fairings.



2) Follow the wires from the turn signals to find the connectors. Unplug both sides connectors. The left side is a little tough to get to but can be unplugged with the aid of a small flathead screwdriver.


3) Remove the tab that holds the turn signals to the housings. Just pry up on it with a screwdriver. Remove the OEM turn signals.



4) Position the provided adapter into the turn signal housing as shown.



5) Feed the wires from the LED turn signal through the adapter and secure the turn signal as shown.

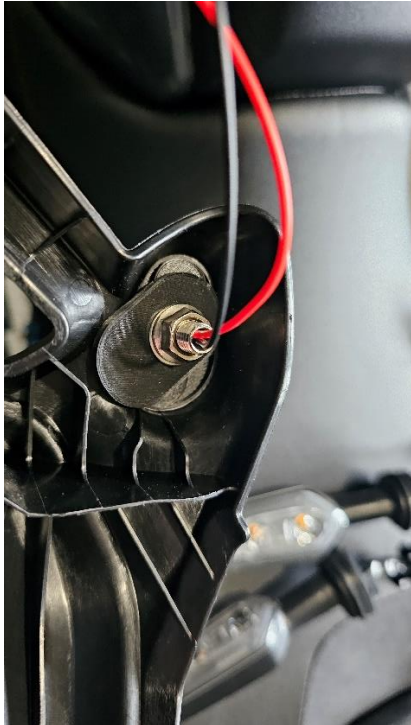

6) Plug the terminals of the turn signal wires into the plug adapter as shown. Red wire on the left. Black wire on the right.



7) Re-install both side fairings with the (4) 5mm Hex bolts and connect the connectors.



SAFETY WARNING

Ensure that all of the OEM and new lights function properly before your first ride! ANY electronics can fail. That's why every motorcycle safety course will teach that it's the riders responsibility to check all the safety equipment of the bike before getting on every time you ride(including break light and turn signals). They also teach you that for the most part car drivers do not "see" a motorcycle at all! Most drivers are unfortunately just not looking for motorcycles; turn signal/break light on or not. It's our responsibility to make sure to ride defensively and assume that no one sees us!

Congratulations on successfully installing your New AVT Yamaha MT-07 LED Front Turn Signals!

Thank you for your order, AVT.



www.avt-innovations.com