

AVT Yamaha MT-09 NI Fender Eliminator Install Guide

- 1) Remove the rear seat with your motorcycle key.
- 2) Remove fasteners holding the rear seat bracket: (5) 4mm Hex.

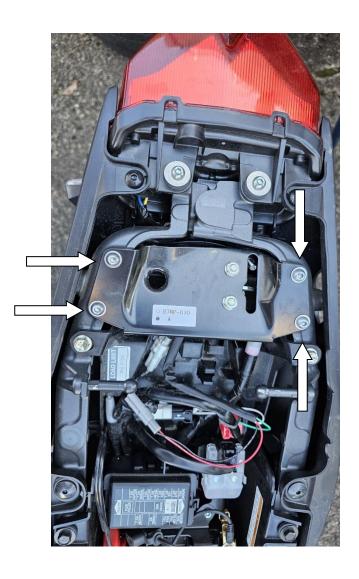

3) Remove the (4) 10mm nuts holding the OEM fender.

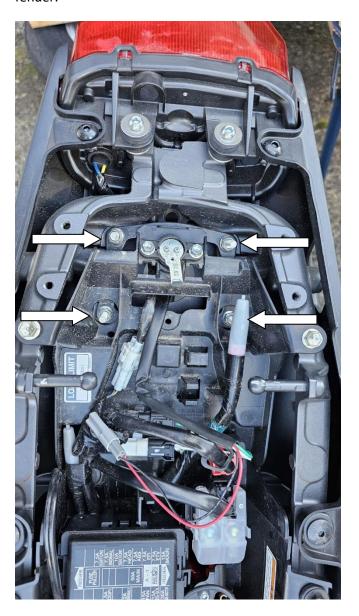

4) Trace the wires from the OEM fender to where they plug into the bike and disconnect the gray plug, black plug, and white plug.

- 5) Feed the wires form your new fender eliminator through the wire opening from the bottom and attach the fender eliminator bracket with the (4) bolts provided and OEM nuts.
- 6) Route the wire bundle from the fender eliminator into the OEM path and connect the electric connectors: Small gray plug to gray plug. Black plug with green wire to black plug. Black plug with white wire to white plug.
- 7) Reinstall the rest of the components is the reverse of the removal:

#1: seat bracket#2: rear seat#3: license plate



Ensure that all of the OEM and new lights function properly before your first ride! ANY electronics can fail. That's why every motorcycle safety course will teach that it's the riders responsibility to check all the safety equipment of the bike before getting on every time you ride(including break light and turn signals). They also teach you that for the most part car drivers do not "see" a motorcycle at all! Most drivers are unfortunately just not looking for motorcycles; turn signal/break light on or not. It's our responsibility to make sure to ride defensively and assume that no one sees us!

Congratulations on successfully installing your New AVT Yamaha MT-09 NI Fender Eliminator!

Thank you for your order, AVT.



www.avt-innovations.com