


AVT Yamaha R3 LED


Front Turn Signal Install

Guide

1) Remove (2) hex bolts and (3) pop rivet on the turn signal fairing.

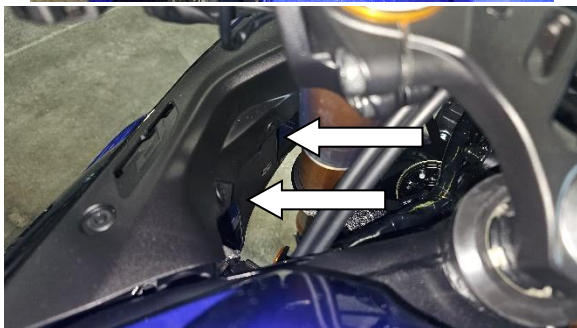

2) Partially remove the turn signal fairing by pulling back and out on the fairing. Unplug the turn signal.

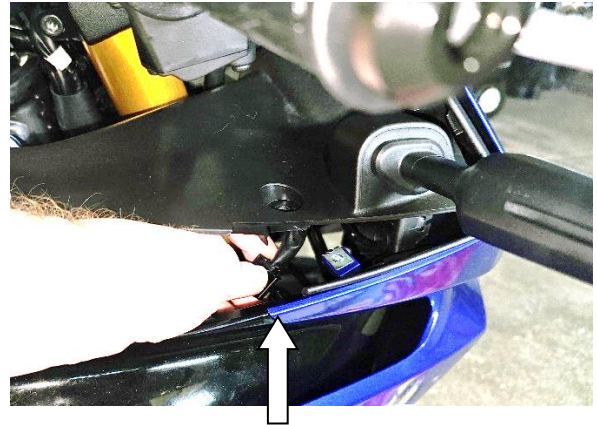

3) Remove the tab that holds the turn signals to the housing. Remove the OEM turn signals by pulling out on it.



4) Feed the wires from the AVT LED turn signal through the adapter and secure the turn signal as shown.



5) Plug the terminals of the turn signal wires into the plug adapter as shown. Red wire on the left. Black wire on the right.



6) Reinstall the turn signal fairing and repeat on the other side.

Congratulations on successfully installing your New AVT Yamaha R3 Front Turn Signals!

Thank you for your order, AVT.



SAFETY WARNING

Ensure that all of the OEM and new lights function properly before your first ride! ANY electronics can fail. That's why every motorcycle safety course will teach that it's the riders responsibility to check all the safety equipment of the bike before getting on every time you ride(including break light and turn signals). They also teach you that for the most part car drivers do not "see" a motorcycle at all! Most drivers are unfortunately just not looking for motorcycles; turn signal/break light on or not. It's our responsibility to make sure to ride defensively and assume that no one sees us!



www.avt-innovations.com